Manual Edition 1.0, Oct. 2011
IB-200-M13700-00

Edifier International Ltd.,
Suite 1610
16th Floor, Tower II,
Lippo Centre,
89 Queensway
Hong Kong

Tel: +852 2522 6989
Fax: +852 2522 1989
www.edifier-international.com

Printed in China

NOTICE:

For the need of technical improvement and system upgrade,information contained herein may be subject to change from time to time without prior notice.

Products of Edifier will be customized for different applications. Pictures and illustrations shown on this manual may be slightly different from actual product. If any difference is found, the actual product prevails.

EDIFIER

M1370

Multimedia Speaker

User manual | Manuel d'utilisateur | Manual de usuario | Bedienungsanleitung | Manuale dell'utente

Important safety instruction

WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Thank you for purchasing this Edifier product. For generations, Edifier tries to provide powered speaker products to satisfy the need of our end customers, even the most demanding ones. This product can add to your home entertainment, personal computer, and mini home theater great sound performance. Please read this manual carefully to obtain the best of this system.

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN

The lightning flash with arrowhead inside thetriangle, is intended to alert the user to the presence of un-insulated dangerous voltage within the product's enclosure that may be of a sufficient magnitude to constitute a risk of electric shock to persons.

To prevent the risk of electric shock, do not remove cover (or back). No user-serviceable Parts inside. Refer servicing to qualified Service personnel only.

The exclamation point inside the triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods of time.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
14. The MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable


Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.


This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

Unpack the Box

Box content:

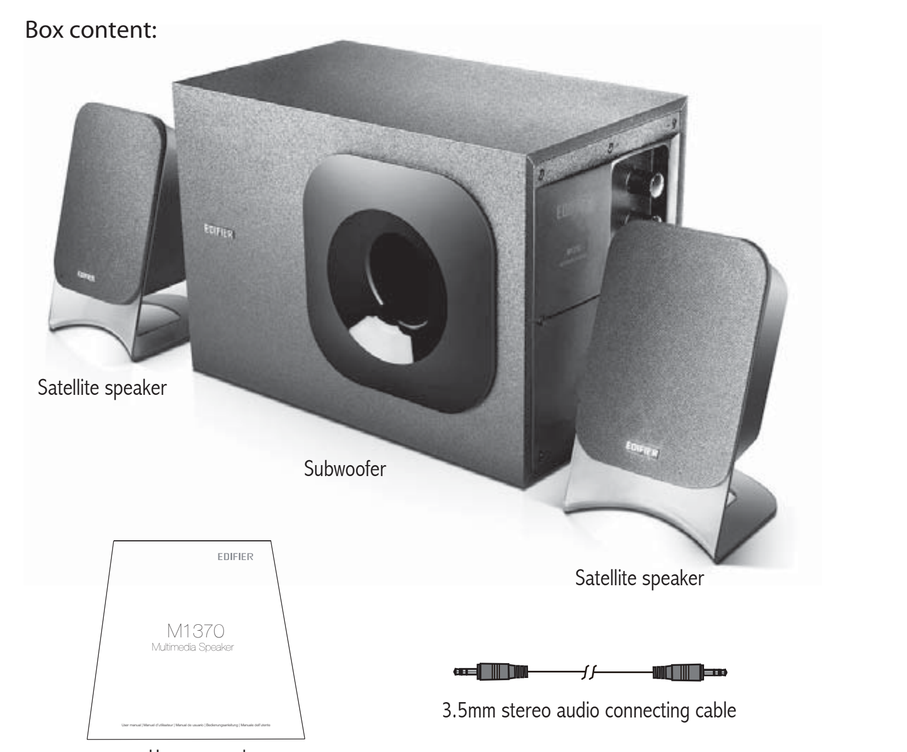


Illustration

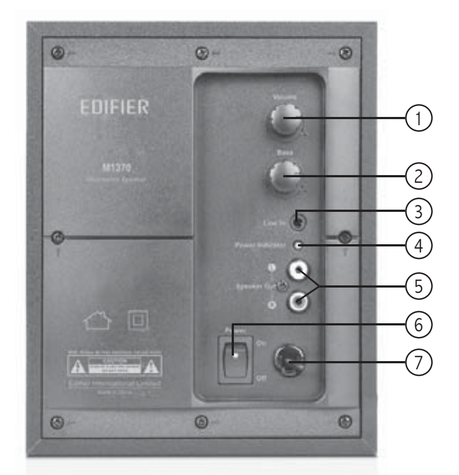

1. Master volume control
2. Bass knob
3. Line in
4. Power indicator
5. Speaker out
6. Power switch
7. Power cord

Connectivity

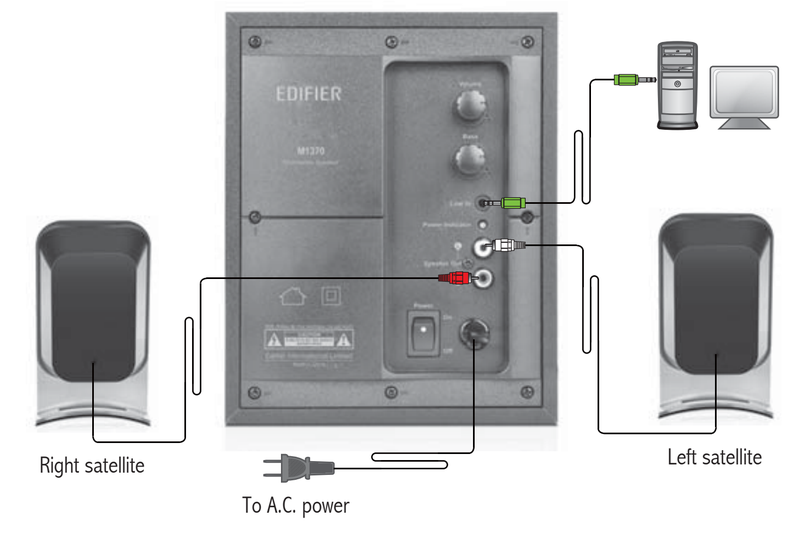

1. Connect the satellites:
   Connect the satellite speaker cable, to the "SPEAKER OUT" port on the subwoofer back panel;
2. Connect to audio source:
   Connect the audio source and the speaker system with the included 3.5mm to 3.5mm audio connecting cable
3. Connect the power:
   Connect the power plug into the wall outlet, turn the speaker on at the main On/Off switch on the back panel.
4. Adjustment
   Adjust the master volume and bass trimmer located on the back of the subwoofer to a comfortable level.

Specifications

Power output:	R/L: RMS 8W × 2 (THD + N=10%, f0=1KHz)	
	SW: RMS 12W (THD + N=10%, f0=80Hz)	
Signal to noise ration:	≥85dBA	
Distortion:	≤0.5%	
Frequency response:	R/L: 200Hz ~ 20kHz	SW: 30Hz ~ 130Hz
Input sensitivity:	R/L: 450mV ± 50mV	SW: 60 mV ± 20mV
Input type:	3.5mm stereo audio input	
Adjustment:	Master volume knob, Bass knob	
Bass unit:	5 inch (131mm), Magnetically Shielded, 5Ω	
Tweeter unit:	2¾ inch (73mm), Magnetically Shielded, 4Ω	
Dimension:	Subwoofer: 164mm × 192mm × 278mm(W×H×D)	
	Satellite: 90mm × 158mm ×100mm (W×H×D)	
Net weight:	Approx. 4.1kg	
Gross weight:	Approx. 4.83kg	

Troubleshooting

- **Not all speakers function:**
  Please first check if the speaker wires are connected securely; then check if the Line-in connectors are reversed; check also if the audio source is at fault.
- **One satellite speaker does not function when playing CD from computer:**
  This kind of phenomena is prone to happen on new computer systems that one satellite does not function when playing CD, but system works fine when playing WAV formatted files. This is mainly due to the fault connection of CD-ROM and sound card, that one channel of signal is shorted to the ground. Please refer to the manual of CD-ROM and sound card to adjust the wire connection.
- **System does not work at all:**
  1. Please check if power is connected, and if the wall outlet is switched on.
  2. Please check if the master volume is turned to minimum
  3. Please check if the audio input cable is connected correctly
  4. Please check if there is signal from audio source
- **Noise coming from speakers:**
  Amplifier circuitry of this product generates little noise, while the background noise of some VCD/DVD player or computer sound card are too high. Please keep the system in active mode and remove the audio source, if no sound can be heard at 1 meter away from the system, then there is no problem with this product.
- **Magnetic interference:**
  This system is complete magnetically shielded, and can be placed near TV or monitor. But since magnet of the subwoofer driver is large, some magnetism leakage is inevitable when the system is too close to the monitor, and it is recommended to keep a 1 meter distance between the speaker system and monitor or TV set.

If you have any further questions or concerns regarding Edifier Products:
Please visit our website at: www.edifier.com, or email Edifier Support for further assistance at: main@edifier.com, If you prefer, you may contact us by phone, Toll Free: 1-877-EDIFIER (334-3437).